



Nikon COOLPIX 5000

Quick Information Sheet

1. Ready the camera:
 - a. Remove lens cap
 - b. Slide mode selector to “camera” icon
 - c. Turn the camera on
 - d. Check indicators for battery and memory
2. Adjust camera settings (flash, image quality & size)
3. Frame the photograph
4. Focus and shoot
 - a. Red lamp: ON=flash, FLICKERING=flash charging, OFF=no flash needed
 - b. Green lamp: ON=subject in focus, FLICKERING=camera unable to focus on subject, use focus lock on another subject at the same distance, then recompose the photograph
 - c. Take the photo by pressing shutter-release button all the way
5. Check the results
 - a. Quick Review: press the “QUICK→” button, then use 4 arrow button  to view other photos
 - b. Delete photo with “trash can” icon
6. Download images to a computer loaded with Nikon View 5
 - a. Turn on the computer
 - b. Turn on the camera (remember to remove lens cap!)
 - c. Set mode selector to Playback by moving indicator to “→” icon
 - d. Select images to be transferred using MENU, Auto Transfer, Selected Photos or All photos. Use the right arrow on the four-arrow key  to send the images to the memory card.
 - e. Connect interface cable
 - f. Transfer images to desired location (Nikon View 5 autoruns)
 - g. Remove the camera from the Windows system using “Unplug or Eject Hardware” icon in the taskbar. [NOTE: on the Common Workstation you may get an error message related to the slide scanner connection.]
 - h. Disconnect the cable and turn off the camera
 - i. Turn off computer